

 


Your phone displays the following status indicators on the top of the screen:

Icon	Description	Icon	Description
	Signal strength		Roaming (outside of normal service area)
	GPRS network connected		WLAN activated
	EDGE network connected		Bluetooth activated
	UMTS network connected		Connected to PC
	Call in progress		New text message (SMS)
	Call diverting activated		New multimedia message (MMS)
	SOS message feature activated		New email message
	Alarm activated		New voice mail message
	Connecting to secured web page		Memory card inserted
	FM radio on		Normal profile activated
	FM radio suspended		Silent profile activated
	Music playback in progress		Battery power level
	Music playback paused		Current time


### Install the SIM or USIM card and battery

- Remove the back cover and insert the SIM or USIM card.
- Insert the battery and replace the back cover.

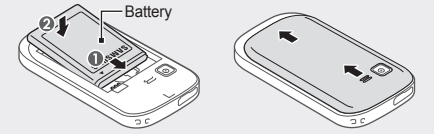

### Charge the battery

 - Plug a travel adapter.
- When charging is finished, unplug the travel adapter.

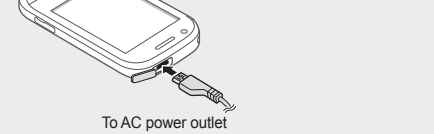


- While the phone is charging, the touch screen may not function due to an unstable power supply. If this happens, unplug the travel adapter from the phone.
- Do not remove the battery before removing the travel adapter. Doing this may cause damage to the phone.
- To save energy, unplug the travel adapter when not in use. The travel adapter does not have a power switch, so you must unplug the travel adapter from the outlet to interrupt the power supply. The travel adapter should remain close to the socket when in use.

### Insert a memory card

 Your phone accepts microSD™ or microSDHC™ memory cards up to 16 GB (depending on memory card manufacturer and type).

- Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone.
- Frequent writing and erasing of data will shorten the lifespan of memory cards.

- Open the cover to the memory card slot on the side of the phone.
- Insert a memory card with the gold-coloured contacts facing down.

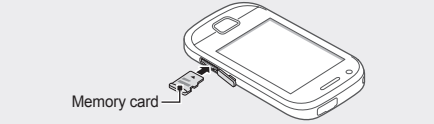

- Push the memory card in the memory card slot until it locks in place.
- Close the cover to the memory card slot.

### Instructional icons

	<b>Caution:</b> situations that could cause damage to your phone or other equipment
	<b>Note:</b> notes, usage tips, or additional information
	<b>Followed by:</b> the order of options or menus you must select to perform a step; for example: In Menu mode, select <b>Messages</b> → <b>Create message</b> (represents <b>Messages</b> , followed by <b>Create message</b> )
	<b>Square brackets:</b> phone keys; for example: <b>[Power/End key]</b> (represents the Power/End key)

### Turn your phone on or off

- To turn your phone on,
- Press and hold **[Power/End key]**.
  - Enter your PIN and select **Done** (if necessary).
  - When the setup wizard opens, customise your phone as desired by following the screen.

- If the battery is removed for more than a few minutes, the time and date will be reset.

To turn your phone off, repeat step 1 above.

- Select a menu or application.
- Press the Back key to move up one level; Press **[Power/End key]** to return to Idle mode.

- When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM or USIM card. For details, contact your service provider.
- Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

### Make a call

- In Idle mode, select **Keypad** and enter an area code and a phone number.
- Press **[Call key]** to dial the number.  
For a video call, select **[Video call key]**.
- To end the call, press **[End key]**.

### Answer a call

- When a call comes in, press **[Call key]**.
- For a video call, select **Show me** to caller to see you.
- To end the call, press **[End key]**.

### Adjust the volume

#### To adjust the volume of the ringtone

- In Menu mode, select **Settings** → **Sound profiles**.
- Select the profile you are using.

- If you are using the silent profile, you are not allowed to adjust the volume of the ringtone.

- Select **Volume** → **Call alert**.
- Drag the slider to adjust the volume level and select **Save**.

#### To adjust the volume of voice during a call

While a call is in progress, press the Volume key to adjust the volume.

- In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

### Change your ringtone

- In Menu mode, select **Settings** → **Sound profiles**.
- Select the profile you are using.

- If you are using the silent profile, you are not allowed to change the ringtone.

- Select **Voice call ringtone** or **Video call ringtone**.
- Select a ringtone and select **Set**.

To switch to another profile, select it from the list.

### Call a recently dialled number

- In Idle mode, press **[Recent calls key]** to display a list of recent numbers.
- Scroll left or right to a call type.
- Select the number you want and press **[Recent calls key]** to dial.

### Use widgets

Learn to use widgets on the idle screen.

- Some of your widgets connect to web services. Selecting a web-based widget may incur additional charges.
- Available widgets may vary depending on your region or service provider.

#### To open a widget

- In Idle mode, scroll left or right to a panel of the idle screen.
- Select a widget to activate on the idle screen.

#### To organise your widget

You can organise each panel of the idle screen with your favourite widgets.

- In Idle mode, select **[Widget toolbar key]** at the top left of the screen to open the widget toolbar.
- Read the widget disclaimer and select **I agree** (if necessary).
- Scroll left or right on the widget toolbar to find the widget you want to use.
- Drag the widget to the idle screen.
- Select **[Widget toolbar key]**.

### Enter text

#### To change the text input mode

- Select **EN** to change the input language.
- Select **T9** to switch between T9 and ABC modes. The dot turns green in T9 mode.
- Select **123** or **sym** to switch to Number or Symbol mode.

#### T9 mode

- Select appropriate virtual keys to enter an entire word.
- When the word displays correctly, select **[Space key]** to insert a space. If the correct word does not display, select **[Back key]** to select an alternate word.

### Use the touch screen

Learn basic actions to use the touch screen.

- To avoid scratching the touch screen, do not use sharp tools.

- For the optimal use of the touch screen, remove the protection film before using your phone.
- Your touch screen has a layer that detects small electrical charges emitted by the human body. For best performance, tap the touch screen with your fingertip. The touch screen will not react to touches of sharp tools, such as a stylus or pen.

- Tap: Touch once with your finger to select or launch a menu, option, or application.
- Tap and hold: Tap and hold your finger on an item to open a pop-up option list.
- Drag: Tap and drag your finger up, down, left, or right to move to items on lists.
- Drag and drop: Tap and hold your finger on an item, and then drag your finger to move the item.

### Access menus

To access your phone's menus,

- In Idle mode, select **Menu** to access Menu mode.
- Scroll left or right to a main menu screen.

#### ABC mode

Select an appropriate virtual key until the character you want appears on the display.

#### Number mode

Select an appropriate virtual key to enter a number.

#### Symbol mode

Select an appropriate virtual key to enter a symbol.

#### To use other features for text input

- To move the cursor, select **[Cursor key]** and then the virtual navigation key.
- To delete characters one by one, select **[Delete key]**. To delete words quickly, tap and hold **[Delete key]**.
- To enter punctuation marks, select **1** repeatedly.
- To start a new line, select **[New line key]**.
- Select **[Case key]** to change case.

### Add a new contact

- The memory location to save new contacts may be preset depending on your service provider. To change the memory location, in Menu mode, select **Contacts** → **Settings** → **Save new contacts to** → a memory location.

- In Idle mode, select **Keypad** and enter a phone number.
- Select **[Add key]** → **Add to Contacts** → a memory location (if necessary) → **Create contact**.
- Select a number type (if necessary).
- Enter contact information.
- Select **Save** to add the contact to memory.

### Send and view messages

#### To send a text or multimedia message

- In Menu mode, select **Messages** → **Create message**.
- Select the recipient field → **Enter manually**.
- Enter a recipient number and select **Done**.
- Select the text input field.
- Enter your message text and select **Done**.  
*See "Enter text."*  
For sending as a text message, skip to step 7.  
For attaching multimedia, continue with step 6.
- Select **Add media** and add an item.
- Select **Send** to send the message.

#### To view text or multimedia messages

- In Menu mode, select **Messages** → **Inbox**.
- Select a text or multimedia message.

### Make fake calls

You can simulate an incoming call when you want to get out of meetings or unwanted conversations.

#### To activate the fake call feature

In Menu mode, select **Settings** → **Call** → **Fake call** → **Fake call hot key**.

#### To make a fake call

In Idle mode, press and hold the Volume key down.

### Activate the mobile tracker 2.0

When someone inserts a new SIM or USIM card in your phone, the mobile tracker feature will automatically send the contact number to specified recipients to help you locate and recover your phone. To activate the mobile tracker,

- In Menu mode, select **Settings** → **Security** → **Mobile tracker 2.0**.
- Enter your password and select **OK**.

- The first time you access **Mobile tracker 2.0**, you will be prompted to create and confirm a password.

- Select **Settings**.

- Enter your mobile tracker password and select **OK**.

- The first time you access **Settings**, you will be prompted to create and confirm a password.

- Select **Mobile tracker** to turn on the mobile tracker feature.
- Select **Recipients** → **Add recipients** → **Contacts**.  
You can also enter phone numbers including a country code (with +) in the recipient list. Skip to step 9.
- Select **Multiple**.
- Select contacts → **Add**.
- When you are finished setting the recipients, select **Save** to save the recipients.
- Select the sender input field.
- Enter a sender's name and select **Done**.
- Select **Options** → **Save** → **Accept**.

- By setting the options in **Access remote phone**, you can delete data on your lost phone or receive calls to the phone.
- To change the password for the mobile tracker, select **Change Mobile tracker 2.0 password**.

### Activate and send an SOS message

In an emergency, you can send SOS messages to your family or friends for help.

#### To activate the SOS message

- In Menu mode, select **Messages** → **Settings** → **SOS messages** → **Sending options**.
- Select **Sending SOS** to activate the SOS messaging feature.
- Select **Recipients** → **Add recipients** → **Contacts**.  
You can also enter phone numbers including a country code (with +) in the recipient list. Skip to step 6.
- Select **Multiple**.
- Select contacts → **Add**.
- When you are finished setting the recipients, select **Save** to save the recipients.
- Select **Repeats**, set the number of times to repeat the SOS message, and select **Save**.
- Press the Back key → **Yes**.

#### To send an SOS message

- With the touch screen and the keys locked, press the Volume key four times to send an SOS message to preset numbers.
- To exit SOS mode, press and hold **[Power/End key]**.

### Use the camera

#### To capture photos

- In Menu mode, select **Camera** to turn on the camera.
- Rotate the phone anti-clockwise to landscape view.
- Aim the lens at the subject and make any adjustments.
- Select **[Shutter key]** to take a photo. The photo is saved automatically.

#### To view photos

In Menu mode, select **My files** → **Images** → a photo file.

#### To record videos

- In Menu mode, select **Camera** to turn on the camera.
- Rotate the phone anti-clockwise to landscape view.
- Select **[Switch key]** to switch to Recording mode.
- Aim the lens at the subject and make any adjustments.
- Select **[Record key]** to start recording.
- Select **[Stop key]** to stop recording. The video is saved automatically.

#### To view videos

In Menu mode, select **My files** → **Videos** → a video file.